




# INSTALLATION INSTRUCTIONS


2007+ Chevy Silverado/GMC Sierra Crew-Cab Under Rear-Seat Lockbox #307

Please read and fill out the enclosed warranty registration card to activate your warranty.


## PARTS CHECKLIST

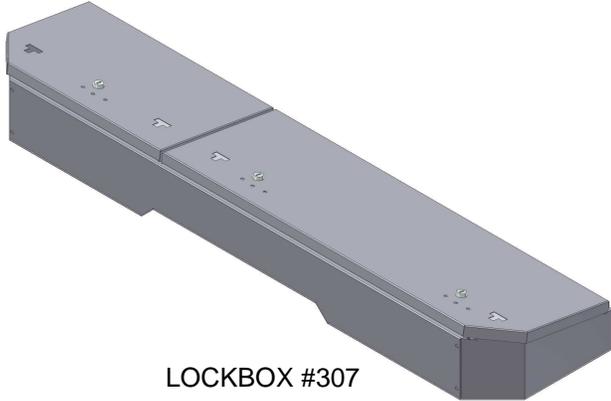

LOCKBOX #307

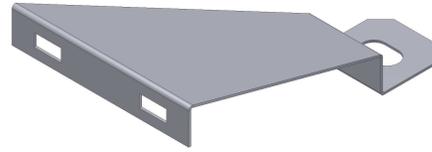


(1) #5 MOUNTING BRACKET (LEFT)

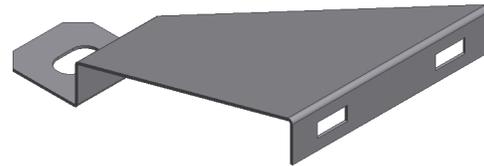

(1) #6 MOUNTING BRACKET (RIGHT)



#19.1 (4) 5/16" WING KNOB NUTS

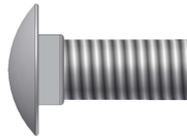

#19.2 (4) 5/16" x 3/4" CARRIAGE BOLTS



#19.3 (4) 3/8" WASHERS

### Tools needed for standard installation

- 18mm Socket and Ratchet

### PLEASE READ ALL INSTRUCTIONS THOROUGHLY BEFORE STARTING INSTALLATION.

1. Flip both rear seats up so they are secured in the upright position.
2. Locate and remove the (2) OEM forward/outer rear-seat mounting nuts from the vehicle, you will reuse these.
3. Place the #307 Lockbox in the rear floor area.
4. Remove and unwrap the #5 & #6 Mounting Brackets from inside the Lockbox.
5. Install the #5 & #6 Brackets to the rear of the box as shown (tapered edges of brackets face center of vehicle) using the #19.2 Carriage Bolts, #19.3 Washers, and #19.1 Wing Knob Nuts. (See Figures #1 & #2)  
**NOTE: Do not tighten #19.1 Nuts as some adjustability is required in the next steps.**
6. Place the obround holes of the mounting brackets over the threaded seat mount studs, and replace (but do not tighten) the nuts removed in Step #2.
7. Adjust the Lockbox's side to side position so that the gap in the lids aligns with the rear seat split. This may be done by alternately opening the Lockbox lids and raising and lowering the rear seats, and adjusting to minimize interference.
8. Once the Lockbox is in its final position, the (4) #19.1 Wing Knob Nuts, and (2) OEM Nuts may be tightened.

Call (970)564-1762 for Technical Support

Page 1 of 2 - 5/14/2014 - Rev051414

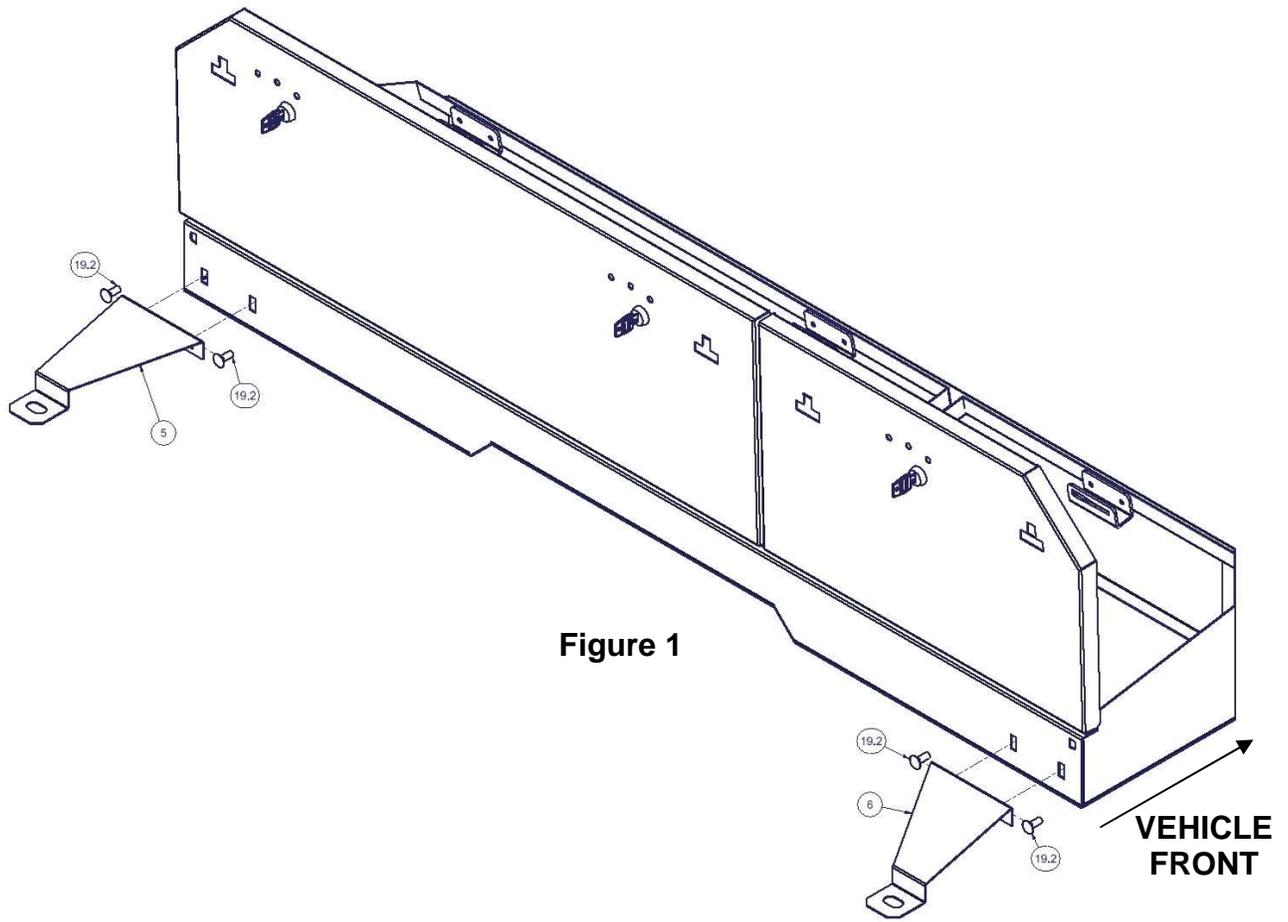


Figure 1

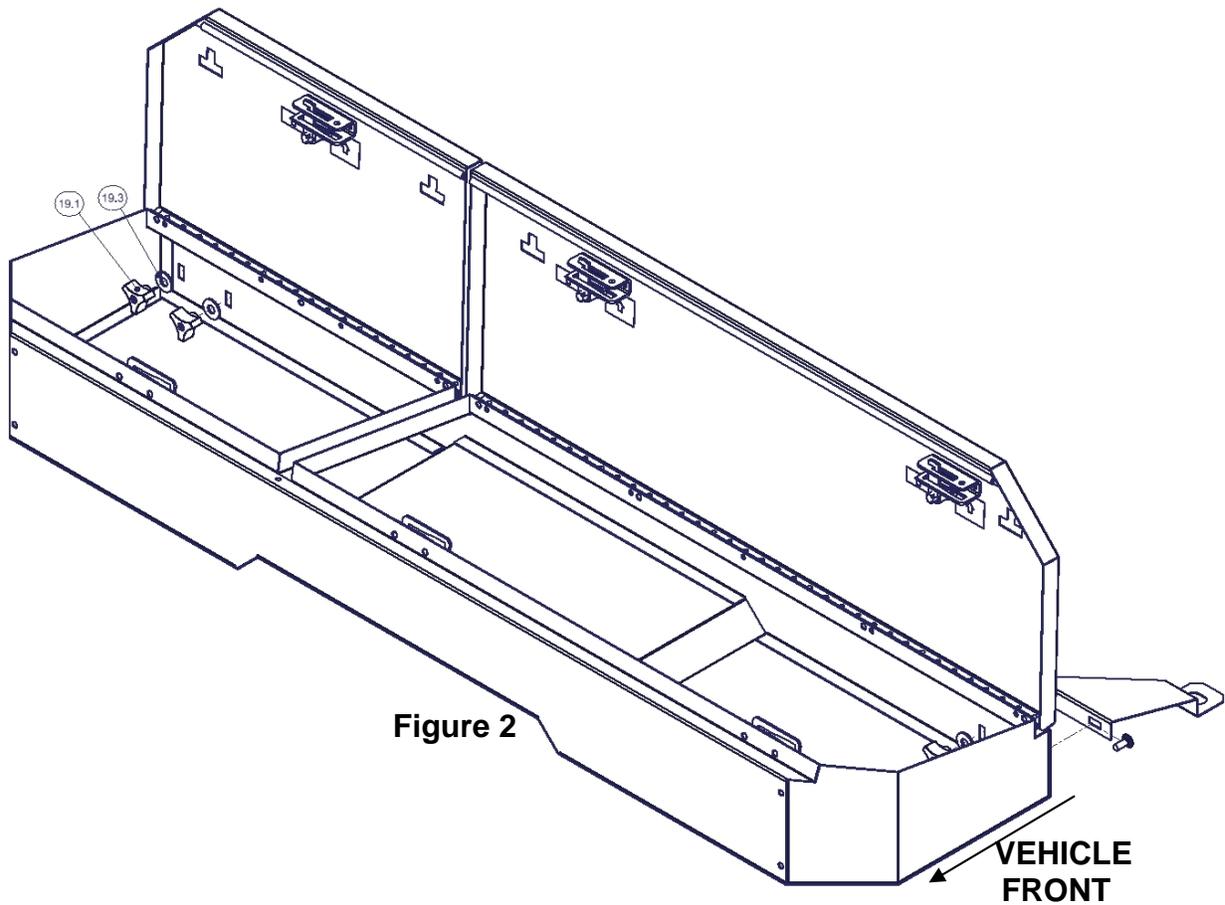


Figure 2

Call (970)564-1762 for Technical Support