
BED RAILS - STAKE HOLE MOUNT

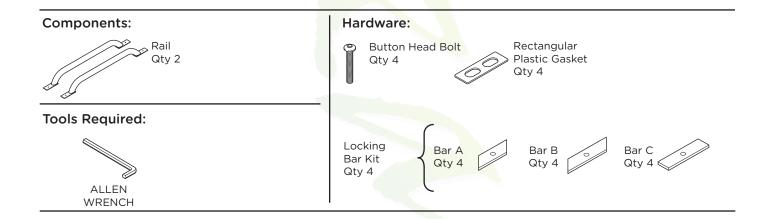



Note: When installing the Rails, all hardware must be left loose until all the items are attached.

1. Read and understand instructions completely before beginning installation.

2. Place Button Head Bolt through Rail Footplate and Footplate Gasket, then thread Locking Bar on Hex Head Bolt. Repeat for remaining three (3) Rail Feet.


BUTTON HEAD BOLT

FOOTPLATE

GASKET

LOCKING BAR

4X

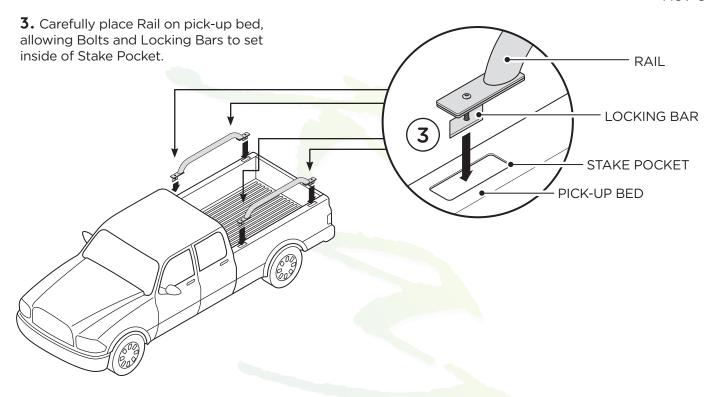

4. Slightly lift each end of Bed Rail (4a) and tighten Bolt securely with Allen wrench (4b). As tightening, make sure the Locking Bar catches on both sides of the Stake Pocket Hole (4c).

