

Read the installation instructions completely and verify that all of the parts listed are accounted for. If you have defective, missing or damaged parts or need assistance, please contact **Go Rhino Parts** for fast, friendly customer service at: 1-888-427-4466 or email: warranty@gorhino.com

Installation



This installation uses 4 brackets per side, (Photo 1).

Photo 1





Step-1 Begin the installation on the driver side. Starting at the front of the vehicle, locate and remove the plastic plugs in the back side and bottom of rocker panel to expose the holes used for placement of the M8 Clip- Nuts, (Photo 2).

Step-2 Install M8 Clip-Nuts in the rocker panel with the threaded end centered over the smaller hole, (Photo 3).

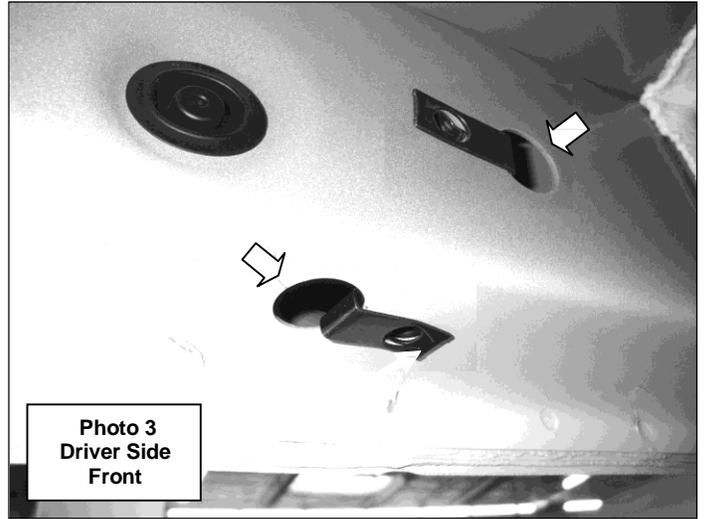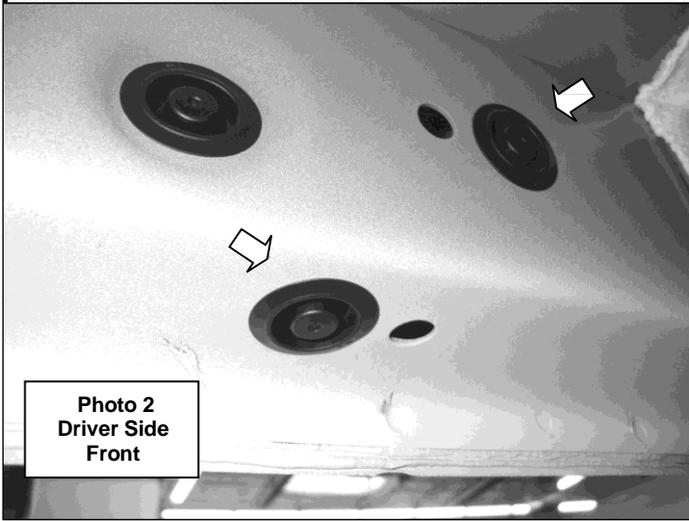

Step-3 Attach one of the brackets to the rocker panel using (2) C/HEX SEMS M8X30MM P1.25 (Photo 4 & 5). Leave the bolts loose for final adjustment.

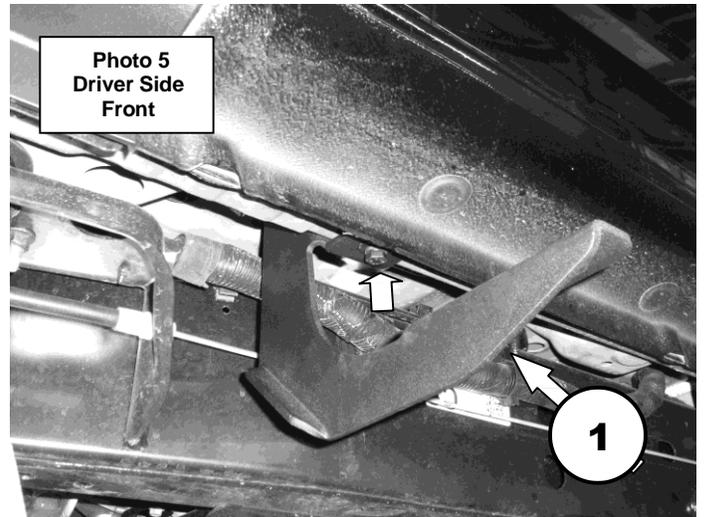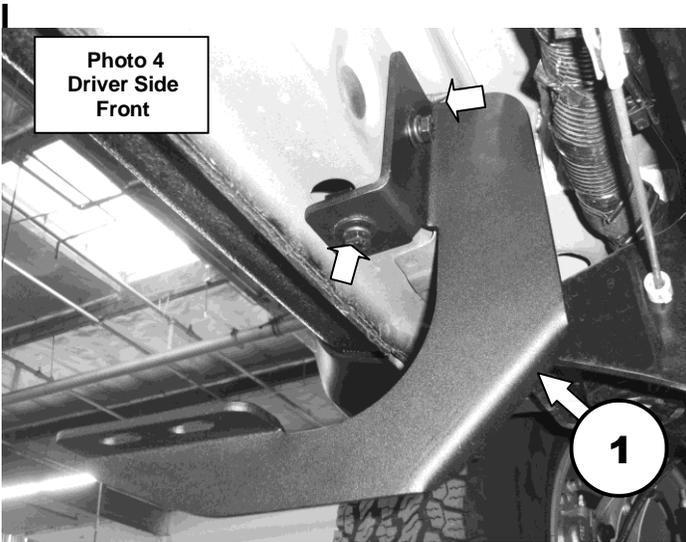

Step-4 Locate the plastic plugs and holes in the rocker panel at the center and rear of the cab, and repeat steps 1-3 to install the 3 additional brackets, (Photo 6 & 7). Leave the bolts loose for final adjustment.

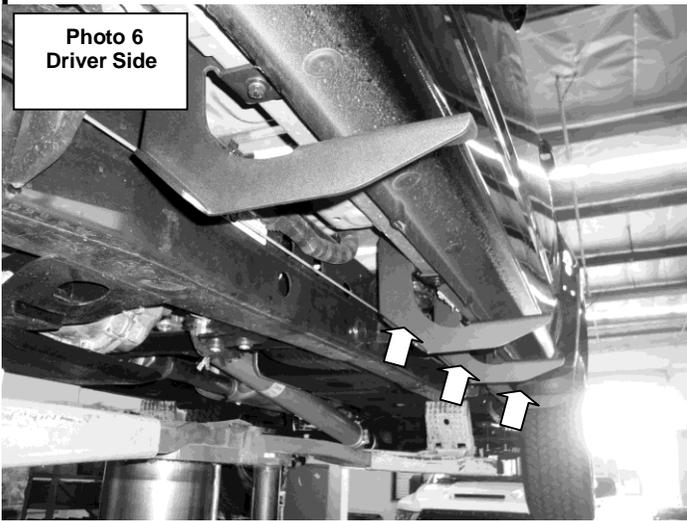


Photo 6
Driver Side

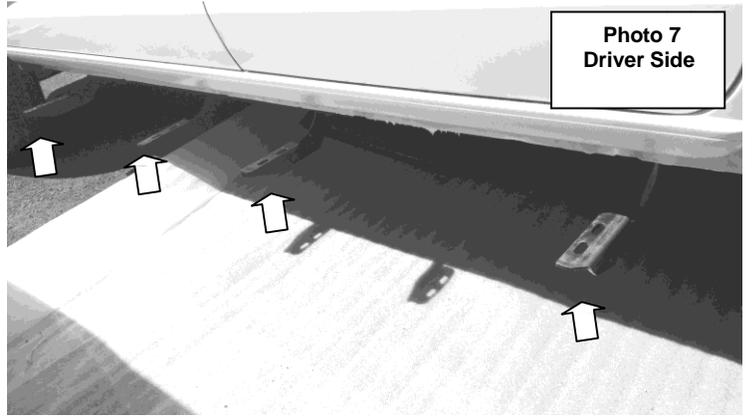


Photo 7
Driver Side

Step-5 Place the passenger side running board on top of the mounting brackets. Position (4) of the U-brackets inside the running board body, and align the U-brackets with the holes in the brackets. Attach the running board to each mounting bracket using the U-bracket, (2) C/HEX SEMS M8X30MM P1.25, (Photo 8 & 9).

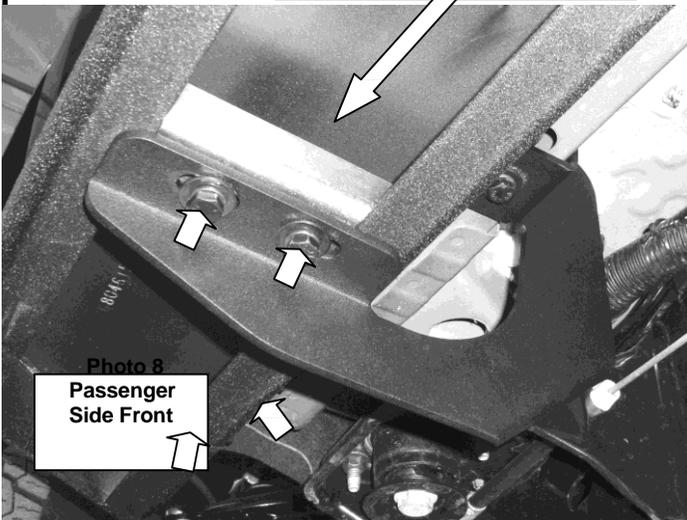
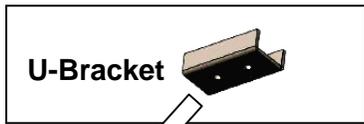


Photo 8
Passenger
Side Front

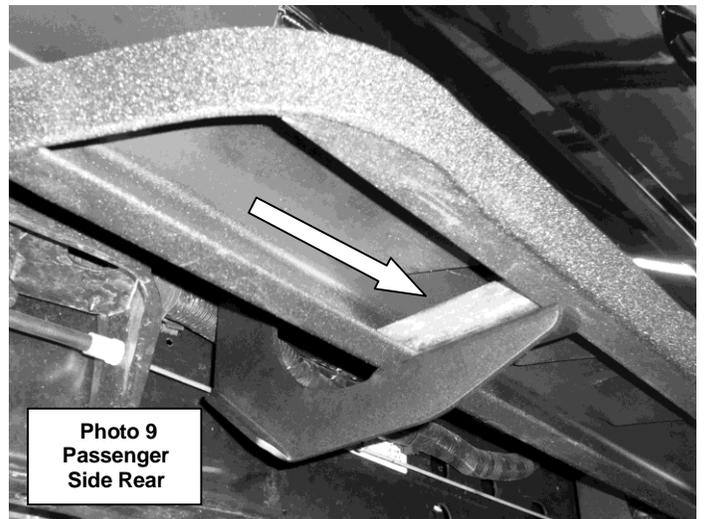


Photo 9
Passenger
Side Rear

Step-7 Align the running board with the vehicle and tighten all supplied nuts and bolts securing the running board and bracket assembly. Repeat the installation steps to install the driver side brackets and running board. Remember to check and retighten all bolts periodically.

