INSTALLATION INSTRUCTIONS

PART#4347(B-C-PS)

05-13 FRONTIER CREW CAB. (USA)

Parts List:

QTY

P01 (1) Side bar set

Driver & Passenger

P02 (3) Main mounting brackets set

Driver & Passenger

(1) Hardware kit including:

T01 (12) M8 Hex nut

T02 (12) 5/16" Flat washer

T03 (12) 5/16" Lock washer

T04 (12) 3/8 x 1 1/4" Hex. Head bolt

T05 (12) 3/8" Flat washer

T06 (12) 3/8" Lock washer

Tools requiered:

Socket & Wrench 13 mm

Ratchet

Socket & Wrench 9/16" Extension to ratchet

Instructions: Aproximated installation time: 30 min.

1. Read and understand instructions completely before beginning installation.


- 2. Identify the correct side before installing, the track but near the fold of the Side bar it is towards atras of vehicle.
- 3. Identify below in the rocker panel, in the sides, spiral per us to the front, center and rear of vehicle.
- 4. Install brackets on spiral per us to the front, center and atras of vehiculo and attach with (2) nuts M8, (2) flat and lock washer 5/16". Leave loose.
- 5. It mounts the Side bar on brackets and attach with (2) 3/8 x 1 1/4" hex head bolt, (2) flat and lock washer ,by each bracket. Leave loose.
- 6. Make any final alignment to the side bar and tighten all bolts.
- 7. Remember to check and re-tighten all bolts periodically.

Assembly Diagram:

ATTACH THE SIDE BAR TO EACH BRACKET

(2) 3/8 x 1 1/4" HEX HEAD BOLT

ILLUSTRATION

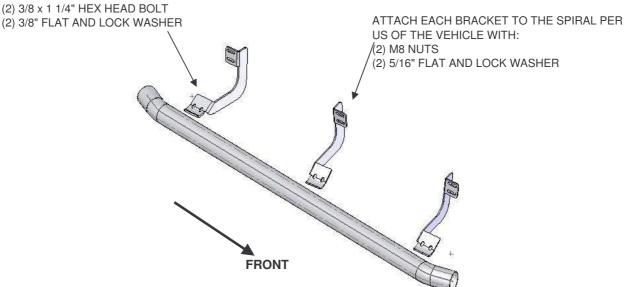

THE ILLUSTRATION SHOWS THE PASSENGER SIDE.

Cleaning and care instructions:

Diseño:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.