



# INSTALLATION INSTRUCTIONS

## 2021+ FORD BRONCO DUAL POD A-PILLAR KIT



### PRODUCTS INCLUDE:

- (2) MOUNTS #46721
- \*Lights sold seperately.

### PACKAGE CONTENTS:

- T30 Torx bit
- 13mm Ratcheting Wrench

### IMPORTANT

THANK YOU FOR PURCHASING RIGID INDUSTRIES' PRODUCTS FOR YOUR VEHICLE.

Please read through all of these Instructions and tips before proceeding with the installation. We do our best to provide a simple installation process for all applications however a professional installation is always recommended.

**Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems.**


### STEP: 1

Assemble the standard surface mounting brackets to the pod light of your choice. 4" 360-Series lights are shown in this instruction.



## STEP: 2

Remove the (2) existing factory bolts with a T30 Torx. Re-use these bolts to install the new RIGID bracket using the supplied washer for the larger mounting hole. It is recommended to apply blue thread locker when re-installing the factory bolts. Passenger side shown in this instruction.

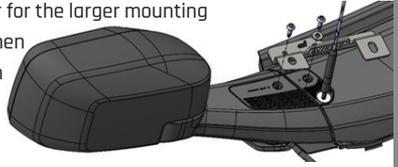



## STEP: 3

Complete installation shown in the photo to the right.



## STEP: 4

Install and wire light pods according to their instructions. Wiring can be routed through this void into the engine bay.

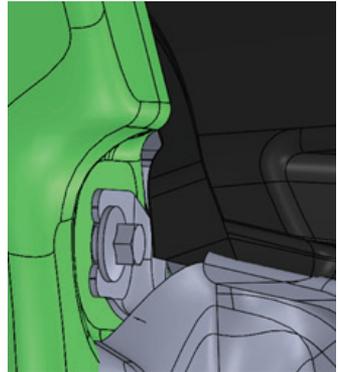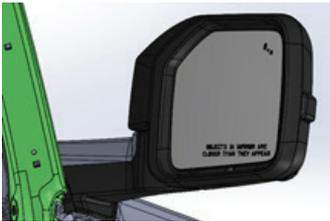

**Wiring:** Wire your lights according to the instructions included with the light. Take care to avoid any heat sources and sharp or abrasive surfaces.

Your installation is now complete.  
**Welcome to the Rigid Nation!**

## WARRANTY INFORMATION

For warranty information, visit [www.rigidindustries.com/about/warranty](http://www.rigidindustries.com/about/warranty) 779 N Colorado St, Gilbert, AZ 85233 • 856-760-5337  
[www.rigidindustries.com](http://www.rigidindustries.com)

RIGID, 360-Series and Rigid Industries are registered and/or common law marks owned by JST Performance, LLC, a Delaware limited liability company d/b/a Rigid Industries.

11-13979-B